



surf-k & surf-km

LTE Primary Alarm Communicators

Paradox Alarm Panels Installation Guide

V1.6

Firmware V1.0

Contents

- 1. Dial Capture (Tip/Ring) Monitoring & Keyswitch..... 3
 - a. Wiring Diagram 4
 - i. SP1728(EX)/1738(EX)/728(EX)/738(EX)/4000/5500/6000/7000, EVO 192/HD 4
 - b. Programming Instructions 4
 - i. SP1728(EX)/1738(EX) 4
 - ii. EVO 192/HD 5
 - iii. SP728(EX)/738(EX) (V 3.10)..... 6
 - iv. SP4000..... 6
 - v. SP5500/6000/7000 6

1. Dial Capture (Tip/Ring) Monitoring & Keyswitch


For Paradox panels that support CID or SIA formats, use Tip/Ring and keyswitch to monitor and control your system remotely.

After installation, for proper partition mapping onto Aryo cloud and keyswitch arming, follow the instructions below:

- *Partition mapping*: Operate on the alarm panel and send signals from each partition. Then, wait for the corresponding event on Aryo cloud, before initiating the next signal.
- *Keyswitch arming*: Enable keyswitch arming for the intended partitions via Aryo cloud settings. Arm/disarm each partition (if applicable) from the user app. Then, wait for confirmation events on Aryo cloud before initiating subsequent actions.

a. Wiring Diagram

i. SP1728(EX)/1738(EX)/728(EX)/738(EX)/4000/5500/6000/7000, EVO 192/HD

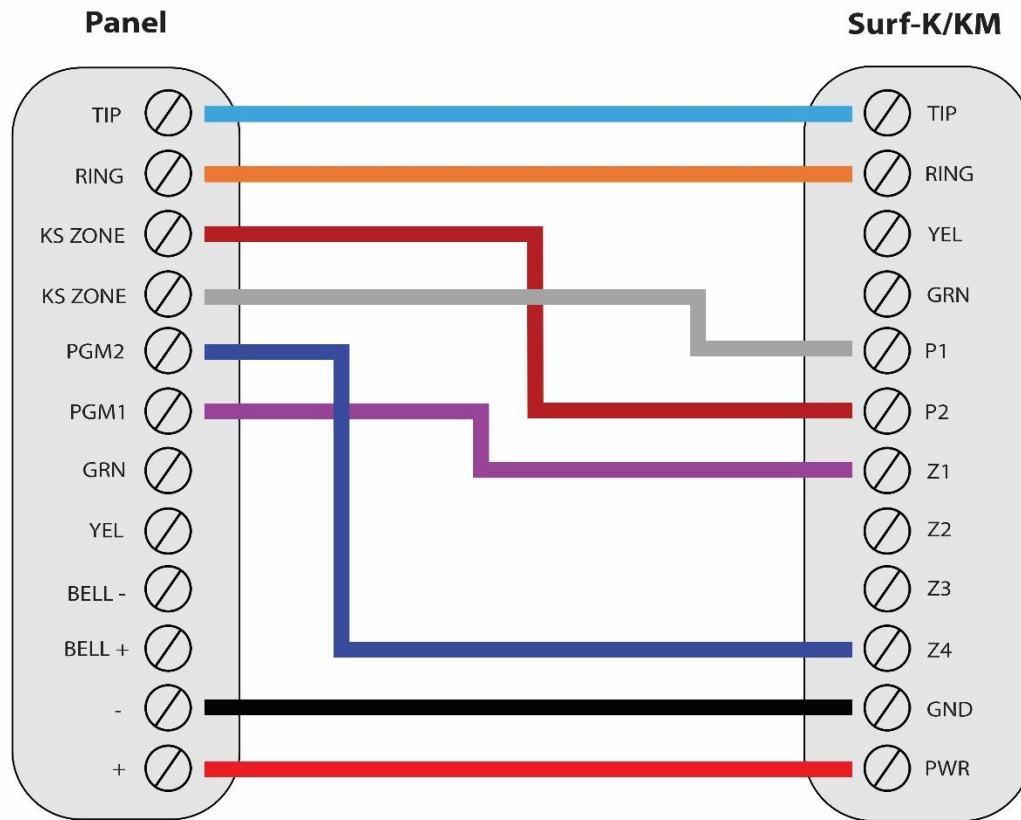

**Colours are for demonstration purposes only*

b. Programming Instructions

To monitor Paradox alarm panels with dial capture, program your system as described below. Instructions in *italics>* are for optional remote arming with keyswitch. PGMs on Surf-K/KM can be connected to any zone programmed as keyswitch for remote arming functionality.

i. SP1728(EX)/1738(EX)

Section	Description
131	Turn option 1 on to report disarming.
135	Turn options 1 and 2 off, to disable TLM, on and options 3 and 4 on, to enable DTMF dialing.
136	Turn option 3 on for automatic CID reporting codes.

140	Set 1 st digit to 5 to enable CID.
143-144	Enter an account number for each partition.
151	Enter any phone number.
001-016	<i>Set an on-board zone to 7 for keyswitch and turn option 1 on for partition 1 (set another for partition 2).</i>
066-068	<i>Set the PGM delay to 0 (follow deactivation).</i>
120	<i>Set PGM1 activation to 02 10 01 for partition 1 armed status monitoring.</i>
121	<i>Set PGM1 deactivation to 02 09 01.</i>
122	<i>Set PGM2 activation to 02 10 02 for partition 2 armed status monitoring.</i>
123	<i>Set PGM2 deactivation to 02 09 02.</i>

ii. EVO 192/HD

Section	Description
[3035]	Turn option 6 off for multi-partition.
[3036]	Turn options 1 and 2 off, to disable TLM, on and options 3 and 4 on, to enable DTMF dialing.
[3061]- [3068]	Enter an account number for each partition.
[3070]	Select 5 or 6 for CID or SIA reporting, respectively.
[3071]	Enter any phone number.
[0101]- [0196]	<i>Select a zone for partition 1 keyswitch arming (and another for partition 2). Enter 01 for partition 1 (or 02 for partition 2) in the corresponding section.</i>
[0501]- [0532]	<i>Enter panel serial number and set input # to 001 for each keyswitch used.</i>
[0601]- [0632]	<i>Enter 11 for partition 1 momentary keyswitch (or 12 for partition 2), in the section corresponding to the keyswitch zone(s). Turn all options off.</i>
[0910]- [0913]	<i>Set activation event group to 064, feature group to 001, start and end # to 000 for partition 1 armed status monitoring.</i>
[0920]- [0923]	<i>Set activation event group to 064, feature group to 002, start and end # to 000 for partition 2 armed status monitoring.</i>
[0914]- [0917]	<i>Set deactivation event group to 014, feature group to 000, start and end # to 000 for partition 1.</i>
[0924]- [0927]	<i>Set deactivation event group to 014, feature group to 000, start and end # to 000 for partition 2.</i>

iii. **SP728(EX)/738(EX) (V 3.10)**

Section	Description
086	Turn options 1, 2 nd off to disable TLM, option 11 off and option 12 on, to select regular reporting.
038	Set to 0 (key 10) for automatic CID reporting codes.
016-023	Enter any phone number.
032-035	Enter an account number.
086	<i>Turn option 3 on, and option 2 off for momentary keyswitch.</i>
039	<i>Set to 2nd to enable normally open PGM.</i>
040	<i>Set to 2/9 for armed status output.</i>
042	<i>Set to 2nd/3 for armed status output.</i>

iv. **SP4000**

Section	Description
800	Turn options 1 and 2 off to disable TLM.
801	Turn option 1 off for disarm reporting.
802	Turn options 1 and 5 on for alarm/restore and open/close reporting.
810	Select 4 for CID or 5 for SIA.
811-812	Enter an account number for each partition.
815	Enter any phone number.
001-032	<i>Enter 26 to set a zone to momentary keyswitch (first entry) for partition 1.</i>
220	<i>Set PGM1 activation event group to 02 and sub-group to 12 to select "Arm partition". Enter 01 to assign it to partition 1.</i>
221	<i>Set PGM1 deactivation event group to 02 and sub-group to 11 to select "Disarm" for partition. Enter 01 to assign it to partition 1.</i>
261	<i>Turn option 2 off for normally open PGM operation.</i>
281	<i>Set PGM delay time for PGM 1 to 000.</i>

v. **SP5500/6000/7000**

Section	Description
800	Turn options 1, 2 off to disable TLM.
801	Turn option 1 off for disarm reporting.

802	Turn options 1 and 5 on for alarm/restore and open/close reporting.
810	Select 4 for CID or 5 for SIA.
811-812	Enter an account number for each partition.
815	Enter any phone number.
001-032	<i>Enter 26 to set a zone to momentary keyswitch for partition 1 (set another to keyswitch for partition 2).</i>
220	<i>Set PGM1 activation event group to 02 and sub-group to 12 to select "Arm partition". Enter 01 to assign it to partition 1.</i>
221	<i>Set PGM1 deactivation event group to 02 and sub-group to 11 to select "Disarm" for partition. Enter 01 to assign it to partition 1.</i>
222	<i>Set PGM2 activation event group to 02 and sub-group to 12 to select "Arm partition". Enter 02 to assign it to partition 2.</i>
223	<i>Set PGM2 deactivation event group to 02 and sub-group to 11 to select "Disarm" for partition. Enter 02 to assign it to partition 2.</i>
261-262	<i>Turn option 2 off for normally open PGM operation.</i>
281-282	<i>Set PGM delay time for PGMs 1 & 2 to 000.</i>