



surf

LTE Alarm System Communicator

General Installation Guide

V1.8

Firmware V1.0

Contents

- 1. Overview 4
 - a. Description 4
 - b. In the Box 4
 - c. Parts Identification..... 4
- 2. Introduction 5
 - a. Operational Scenarios..... 5
 - b. Device & Cloud Features..... 5
- 3. Pre-Installation Recommendations 6
 - a. Antenna..... 6
- 4. Monitoring Options..... 6
- 5. Setup & Installation Steps..... 6
 - a. Add User & Device on Aryo Cloud 6
 - b. Install & Program Alarm Panel..... 7
 - c. Connect Surf to Alarm Panel..... 7
 - d. Complete Aryo Cloud Configurations 7
 - e. Configure User’s Mobile App 7
- 6. Performance Guide 7
 - a. Signal Level..... 7
 - b. Temperature 8
 - c. Voltage 8
 - d. Button Functions..... 8
 - e. LED Indications..... 9
 - f. Connector Cable Color Code 10
 - i. Connector Pins Description..... 10
 - ii. Other Hardware Connections 11
- 7. Trouble Conditions & Troubleshooting..... 11
 - a. Trouble Conditions..... 11
 - i. Primary Power Failure..... 11
 - ii. Network Signal 11
 - iii. No Cellular Service 11
 - iv. SIM Card Error 11
 - v. Aryo Communication Failure 11

vi.	High/Low Temperature	11
b.	Troubleshooting.....	12
8.	Specifications	14
9.	Warranty	14
a.	Product Warranty	14
b.	Warranty Updates.....	15
c.	Warranty Disclaimer	15
d.	Limitations of Liability	15
e.	Repair Under Warranty.....	16

1. Overview

a. Description


Surf is a primary alarm communicator that utilizes cutting-edge cellular (LTE) technology for efficient dial capture monitoring of alarm systems communicating in CID and SIA formats. Surf also includes a zone and PGM for remote control, enabling keyswitch arming and disarming the alarm systems.

With Surf, users can remotely access their systems from anywhere via the Aryo cloud platform. This platform is accessible through web browsers and dedicated iOS and Android smartphone apps, providing users with convenient and reliable security system management on the go.

b. In the Box

- surf
- Antenna (75 cm)
- Connector cable
- Quick Start Guide

c. Parts Identification

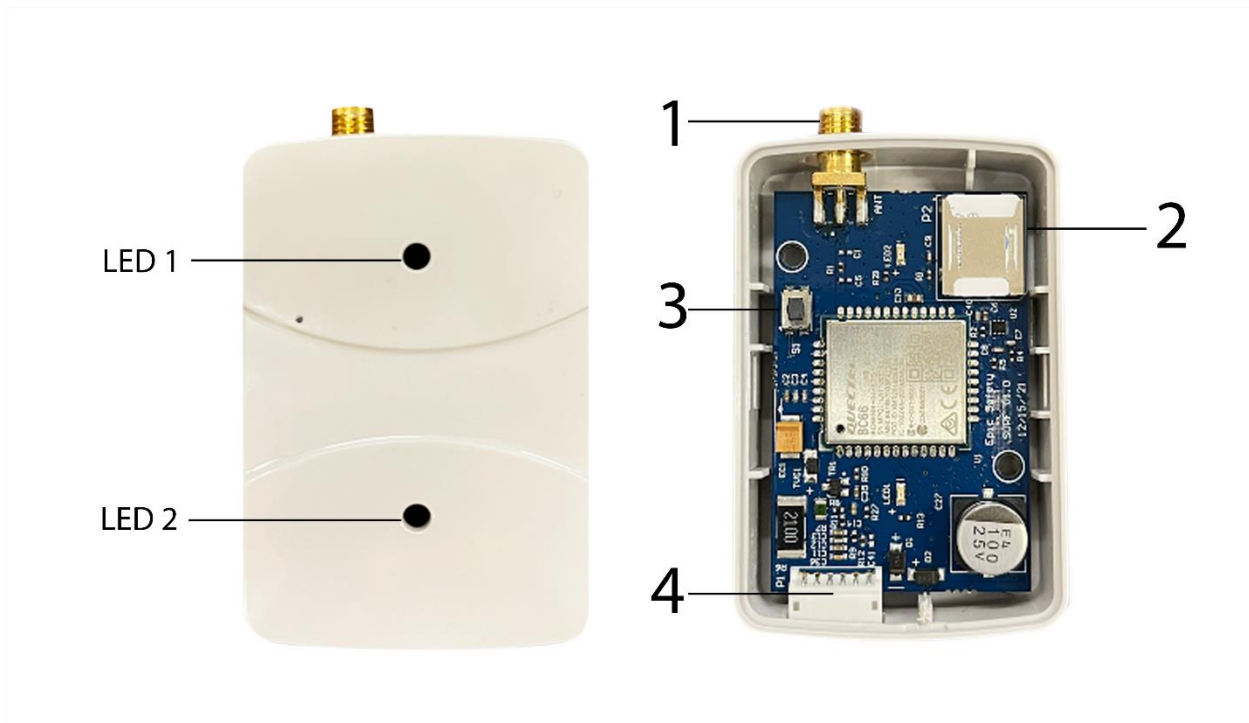

1) Antenna connector

2) SIM card

3) Button

4) 6-pin connector

2. Introduction

a. Operational Scenarios

- Take-over any pre-monitored alarm system.
- Replace any system on the 3G network.
- Upgrade and replace traditional landline systems.
- New installations.

b. Device & Cloud Features

Surf:

- Small, lightweight, and easy for connection to any security system inside or outside the alarm panel enclosure.
- Wide-area coverage via cellular technology using LTE, NB-IoT.
- Low-power consumption and energy-efficient design for cost-effective operation.
- Dial capture monitoring and keyswitch arming via Aryo cloud platform.
- Voltage detection for enhanced system reliability.
- Temperature monitoring for environmental control.
- Full event reporting to Aryo cloud and Central Monitoring Station.
- Partition arming status monitoring.
- Daily summary reports and remote diagnostics.
- User code management with 1 master code (for the primary user) and up to 40 user codes.
- Remote firmware updates for system enhancements.

Aryo cloud platform:

- Mobile app integration for on-the-go control and monitoring via smartphones and tablets.
- End-to-end device and user data encryption for enhanced protection.
- Multi-factor authentication options for enhanced user verification.
- Support multiple languages for user interface.
- Separate accounts for each role including Sub-users.
- Centralized management of multiple alarm systems within a single app.
- Emergency buttons for immediate response activation.
- Effortless cancellation of false alarms and dispatch of resources.
- Management of master and user codes.
- Customizable user permissions and access levels for tailored security settings.

- Advanced analytics and reporting tools for trend analysis and security insights.
- Customizable Push, Email, SMS, and Audible notifications.

3. Pre-Installation Recommendations

- Conduct a placement test to find a suitable location with the best LTE signal.
- DO the wiring when both Surf and the alarm panel are powered down.
- DO NOT route any wire over the alarm panel or Surf circuit boards.
- Install and program your alarm panel before connecting it to Surf.
- DO NOT power up Surf, prior to user and device registration.
- Connect Surf and our IP product, Aero-K, for dial capture and keybus monitoring to the same alarm panel, when dual path connectivity and communication type are required.
- Install and operate Surf within its specified temperature ranges to prevent any possible damage.
- DO NOT install the unit close to heating source, direct sunlight, or in a damp location.
- DO NOT connect Surf to a phone line. This will damage the device.
- Always connect Surf to an approved power source and battery backup.
- Use a DC relay to connect panel powered PGM (supplies power) to the Surf zone. Otherwise, it will damage the device.

a. Antenna

- Surf uses full-band LTE magnetic antenna. The antenna can be connected to Surf antenna connector as shown in section **1.c**.
- Antenna should be placed high in an open area within the building and far from any interference by heating ducts, metal pipes, or electrical wiring and concrete walls.
- DO NOT install the antenna in a metal enclosure.

4. Monitoring Options

Dial capture allows Surf to detect and capture CID and SIA events sent by alarm panel and monitor any system that uses these two formats. Dial capture monitoring is available by connecting the TIP and RNG pins of Surf to any panel that can communicate in CID and SIA formats.

5. Setup & Installation Steps

The required steps for setting up Aryo cloud, device, and alarm panel are summarized in the following. Refer to section **3** for pre-installation requirements.

a. Add User & Device on Aryo Cloud

- Register the user on the Dealer dashboard of Aryo cloud platform.
- Add the device to the platform.

- Assign the newly added device to the registered user.
- Assign a specific account number obtained from your CMS for the system.
- If required, assign additional account numbers to other partitions. If the corresponding sections are left blank, the alarm panel account number set in previous step is considered for all partitions.

b. Install & Program Alarm Panel

Install, wire, and program the alarm panel, making sure it is in working condition prior to connecting Surf to it.

For alarm panel programming instructions suggested for Surf functionality, refer to Epic’s product manual corresponding to your alarm panel vendor and model number.

c. Connect Surf to Alarm Panel

Connect the power terminals from the alarm panel to those of Surf. Connect Tip and Ring of the alarm panel to TIP and RNG terminals on Surf for dial capture monitoring. Use PGM and zone wires for keyswitch arming.

d. Complete Aryo Cloud Configurations

Complete the device and alarm panel configurations on Aryo cloud. For further information, log in to our dealer portal.

e. Configure User’s Mobile App

- After completing the registration, user will receive an email from Aryo cloud with a link to set up their account.
- User downloads Aryo app from the App Store (iOS) or Google Play (Android).
- Upon successful logging in to Aryo app, they will be prompted to change their password.
- Once the new password is set, the user is now able to use the app to access and manage their system*.

*User updates the default master code for the remote control.

6. Performance Guide

a. Signal Level

The signal level is reported using RSSI (Received Signal Strength Indicator) method which can be converted to dBm (decibel-milliwatts). The RSSI and corresponding signal strength can be seen in the table below:

RSSI	Signal Level (dBm)	Service Level
99	NA	No service
0-2	-113 ~-109	

3-11	-108 ~-91	Poor – Device will trigger signal strength trouble event.
12-16	-89~-81	Acceptable
17-21	-79~-71	Good
22-31	-69~-51	Excellent

This data is for reference only and may not be applicable for all situations.

b. Temperature

For correct operation, the system must be in the operating range for temperature level. The default temperature levels, and their corresponding interpretations are listed below. Dealers will be able to adjust the high and low temperatures and view the current value on the Aryo cloud platform.

Surf Temp. (°C)	Interpretation
< -5 °C	Low – Device will trigger low temperature trouble event.
-5 °C to 50 °C	Normal
> 50 °C	High – Device will trigger high temperature trouble event.

c. Voltage

For proper operation, both alarm panel and Surf should be powered by approved power source within the recommended range. Different voltage levels and corresponding interpretations for the alarm panel are listed below.

Panel Voltage (VDC)	Interpretation
< 9	Low voltage - Device will trigger voltage trouble event.
10.1 – 13	Acceptable
13.1 – 14.5	Good
> 14.5	High voltage - Device will trigger voltage trouble event.

d. Button Functions

Surf button is used for a few functions according to the table below:

Button Press Time (sec)	Function Name	Function Use	Duration time	LED Indicators
1 sec	Self-Test	1- To send device information such as signal level, voltage, and temperature to Aryo cloud.	Immediate	Blinks once

		2- Could be also used for exiting the Signal Level Mode, before the duration specified in the next row ends.		
5 sec	Signal Level Mode	To select the best mounting location based on the signal level of Surf. LED Indications LED 1 Blink RSSI LED 1 On 0 ~ 9 LED 2 Blink 10 ~ 12 LED 2 On 13 ~ 16 LED 2 On >17	30 sec	Slow blinking
10 sec	Reboot Device	If required following the troubleshooting guide in section 7.b.	Immediately	Fast blinking
15 sec	Reset SSL	When a device is reused for a new client or moved to a new location.	Immediately	Alter blinking

e. LED Indications

Condition	Status	LED	Color	On	Off	Fast blink	1 blink	2 blinks	3 blinks	On-1 blink	On-2 blinks
Power	DC power on	1	Red	X							
	DC power off	1	Red		X						
	Device not registered	1	Red				X				
	Device troubles	1	Red			X					
	Firmware update in progress	1&2	Red/Green	Alternating. LED 1 is on/off while LED 2 is off/on.							
Cellular Network	Cannot find the cellular network	2	Green			X					
	Poor cellular signal	2	Green				X				
	Medium cellular signal	2	Green					X			

	Good cellular signal	2	Green						X		
Server Network	Connected to server & good signal	2	Green	X							
	Communicating with server	2	Green			X					
	Connected to network & poor cellular signal	2	Green							X	
	Connected to network & medium cellular signal	2	Green								X

f. Connector Cable Color Code

A connector cable plugs into the 6-pin connector on Surf. Consider the following table when connecting Surf to the alarm panel terminals:

Surf Cable Color	Description
Red	DC+
Black	DC -
Blue	Zone
Brown	PGM
Yellow	Ring
Green	Tip

i. Connector Pins Description

Surf Pin	Alarm Panel Terminal	Connection
Tip	TIP	Surf connects to Tip/Ring interface of any alarm panel that uses CID or SIA formats to capture all generated signals and send them to our Aryo cloud and then monitoring centers.
Ring	RING	
PGM	Keyswitch zone	Surf has 1 PGM to trigger the keyswitch zone of the alarm panel for remote arming / disarming.
Zone (Dry Contact only)	Available PGM Always use a relay when connecting panel PGM that	Surf has 1 zone to provide arm/disarm status of alarm panel partition when connected to arm

	supplies voltage/current to the Surf zone. Otherwise, it will damage the device.	status PGM.
Ground (GND)	Ground	Surf could be powered by an alarm panel auxiliary 9-14 VDC. External auxiliary power source with backup battery can be used if they use a common ground. The device can still operate with a power range of 6 to 20 VDC. Surf monitors panel voltage and generates power trouble when voltage drops below 9 VDC.
Power (PWR)	9-14 VDC	

ii. Other Hardware Connections

Antenna connector is for connecting the full frequency LTE antenna.

7. Trouble Conditions & Troubleshooting

a. Trouble Conditions

i. Primary Power Failure

If alarm panel power rises above 14.5V or falls below 9V, Surf will send a trouble event to Aryo cloud server and CMS.

ii. Network Signal

If radio signal is poor, Surf will send a trouble event to Aryo cloud server and CMS.

iii. No Cellular Service

If Surf cannot connect to the cellular tower (RSSI is 0 or 99), Surf will send a trouble event to Aryo cloud server and CMS.

iv. SIM Card Error

If there is an issue with SIM card detection by Surf, it will send a trouble event to Aryo cloud server and CMS.

v. Aryo Communication Failure

If there is any error or failure in device communication with the cloud, Surf will send a trouble event to Aryo cloud server and CMS.

vi. High/Low Temperature

If temperature goes above 50 degrees Celsius or falls below -5 degrees Celsius, Surf will trigger a trouble event on the host panel and sends the signal to Aryo cloud server and the CMS.

CID codes for supervisory and troubles

Power	970
Network Signal	971
No Cellular Service	972
SIM Card Error	974
Aryo Communication Failure	976
High Temperature	977
Low Temperature	978

b. Troubleshooting

Trouble Category	Trouble	Indication	Solution
Primary Power Failure	Panel Voltage below 9V or above 14.5V	First LED blinks quickly.	Check the output voltage of DC/Auxiliary terminals of the alarm panel.
Network Signal	Poor signal	1. First LED blinks quickly. 2. Second LED blinks slowly, one at a time.	1. Make sure the antenna is connected properly. 2. Move the antenna or Surf to a place where the LTE signal is well received.
Cellular Network	No connection to the cellular tower (RSSI 0 or 99)	1. First LED blinks quickly. 2. Second LED blinks quickly.	Check if the signal level is acceptable. If it is, check the followings: 1. Check that the SIM card is properly installed in the device. 2. Check that the device is properly registered with the cloud server.
SIM Card Error	No Sim Card Detected	1. First LED blinks quickly. 2. Second LED blinks quickly.	1. Check that the SIM card is properly installed in Surf.

			<p>2. Check that the device is properly registered with the cloud server.</p> <p>3. Reboot the device.</p>
Aryo Communication Failure	No connection to Aryo cloud	<p>1. First LED blinks quickly.</p> <p>2. Second LED blinks quickly.</p>	<p>If it does not operate normally even after waiting for a while, check the following.</p> <p>1. Check that the SIM card is properly installed.</p> <p>2. Check that the device is properly registered in the cloud server.</p> <p>3. Check if the antenna is properly connected.</p>
High/Low Temperature	Ambient temperature being out of the operating range of Surf	<p>1. First LED blinks quickly.</p>	<p>Check the ambient temperature, identify the cause of the temperature abnormality, and eliminate the cause.</p>

8. Specifications

Hardware	Surf
Dimensions	57.5mm*37.5mm*14.75mm
Weight	19 g
Operating temperature	-5°C to 50°C
Humidity	86%
Input voltage	9-14 VDC
Operating voltage	6-20 VDC
Standby current draw at 13.5V	25 mA
Peak current draw at 13.5V	60 mA
Keybus	N
Tip/Ring	Y
Legacy	N
Zones	1
PGMs	1
Status LEDs	2
Antenna Length	75 cm
Antenna frequency	LTE Full band
Communication	LTE

9. Warranty

a. Product Warranty

Subject to the limitations set forth herein and in Epic's warranty policy document, Epic warrants that the Products sold by it to its authorized dealers shall be free, under normal use and service, from defects in material and workmanship for a period of twelve (12) months from the date of purchase. Epic does not warrant Products that do not have a serial number. This warranty shall also be void if there is a failure to maintain the Products and the systems in which they operate in proper working conditions. During the warranty period, Epic shall, at its option, repair or replace any defective product upon return of the Product by the dealer, to Epic, at no charge for labor and materials. This warranty is for the benefit of the authorized dealer only and is therefore non-transferable, non-assignable, and is voided when the Warranted Product is transferred to another party.

For more detailed information on Epic's warranty policy, refer to the Warranty Policy document.

b. Warranty Updates

Epic reserves the right to update or modify the terms and conditions of its warranty at any time, without prior notice. Any updates or modifications to the warranty will be communicated to the dealer through appropriate channels, such as official notifications or revised warranty documentation. It is the responsibility of the dealer to stay informed about any changes to the warranty and to ensure compliance with the updated terms.

c. Warranty Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, EPIC SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF EPIC CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPLICABLE LAW.

Epic's Limited Warranty is offered to its authorized dealers, only on the new Products according to Epic's warranty policy that is published and updated from time to time. It includes replacement or repair of defective products returned in accordance with the Return Policy. Freight costs to the repair center are not covered. If repair attempts fail, replacement is the sole remedy. Epic holds no responsibility for the products manufactured by third parties. Epic also makes no assertion that its products are immune to compromise and/or circumvention.

All Epic's services and information provided by Epic are offered on an "as is" basis. Epic shall not be held liable for any disruptions, errors, delays, or inaccuracies in the provision of its services, including Aryo cloud and app. Occasional interruptions, maintenance periods, and technical issues may occur, and Epic shall not be responsible for any resulting damages or losses.

d. Limitations of Liability

Epic shall not be held liable for indirect, incidental, special, exemplary, punitive, or consequential damages of any kind, including but not limited to loss of profits, data, revenue, production, or use, business interruption, cost of substitute, or replacement equipment, facilities or services, downtime, the claims of third parties (including Users), property damage, or the procurement of substitute goods or services. This applies to any damages arising out of or related to the use of Epic's services, the use or performance of any product, whether based

on contracts, tort (including negligence), or any other legal theory, even if Epic has been advised of the possibility of such damages.

Epic shall not be liable for any loss and/or damage to the user's premises and the contents thereof, any injury or death to any person, any failure of the system to function, any error in performance, any inaccuracies or issues in transmission, reception, or handling by the recipient of any alarm signal to react properly, for any reason whatsoever, and such circumstances shall not create any liability for Epic, whether in breach of contract, tort, or otherwise.

Epic's usage of services is not intended to establish obligations under the Health Insurance Portability and Accountability Act of 1996 (HIPAA), and no assurances are provided that the services fulfill HIPAA requirements. If the end User is (or becomes) a Covered Entity or Business Associate under HIPAA, Epic's services cannot be employed for any involvement with Protected Health Information (as defined by HIPAA) without obtaining prior written consent from Epic.

Epic is not an insurer and assumes no responsibility for any damage, loss, or injury resulting from alarm system failures or signal monitoring, and the user must obtain their required insurance coverage. System failures may occur beyond Epic's control, and responses from authorities can be slow or ineffective. The system serves as a deterrent, not a comprehensive protection or substitute for insurance. Payment to Epic covers subscription services, not insurance. Epic's charges are unrelated to User's premises value. In case of loss, the User's reimbursement sources are their resources or insurers.

The total aggregate liability of Epic, its affiliates, and their respective officers, directors, employees, and agents, for damages of any nature, regardless of the form of action, shall not exceed the total amount paid by the authorized parties to Epic in the twelve (12) months preceding the event giving rise to the claim.

e. Repair Under Warranty

All the warranty claims must be accompanied by a Return Merchandise Authorization (RMA) number which must be obtained before merchandise can be returned for any warranty replacement or repair. To request an RMA number, the customer can contact Epic's Technical Support Center via telephone. The Technical Support Center will provide troubleshooting assistance and if they find the product to be defective, will issue an RMA number. The RMA number must be displayed on the outside packaging of the returned item. Transportation charge, if any, incurred in connection with the return of a defective item to Epic shall be borne by the customer. Any collect shipments returned to Epic will be refused. Epic shall fix the goods without extra costs under the warranty period.

Epic shall pay any transportation charge incurred with the redelivery of a repaired or replacement item or ship the warranty item with customer's next order. If, however, Epic

reasonably determines that the item can function, the customer shall pay all the transportation charges. If Epic determines, at its sole discretion, that the allegedly defective item is not covered by the terms of the warranty provided hereunder or that a warranty claim is made after the warranty period, the cost of repair by Epic, including all shipping fees, shall be paid by the customer.

Claim for damaged products or shortages when shipment arrived must be made by the customer immediately. If any goods are damaged on shipment arrival, it must be noted on the carrier's waybill prior to signing. Failure to note the shortages or damages on the carrier's waybill will result in the claim being denied. Epic will provide free replacement or credit note for the damaged products or product shortage claims.